 


Handsägen

PS-32L/32LL / UV-32W/32XW / CT-32W/32XW / UV-32/32X / CT-32/32X

 
PS-32L/PS-32LL **640306**

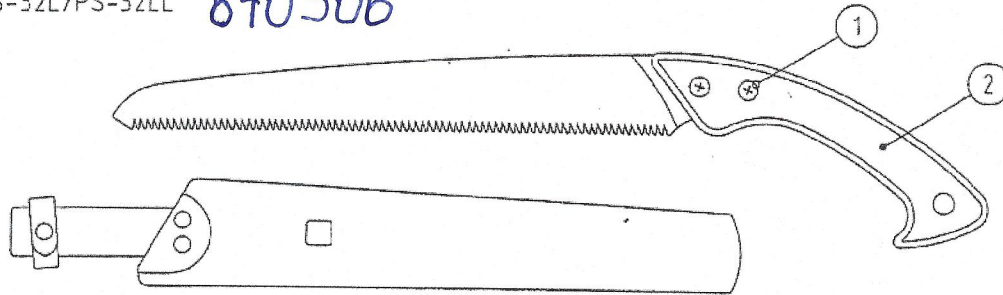

- 1) 1200-94 Schraube & Mutter für PS-32L / PS-32LL **640399**
- 2) 1200-321 Holzhandgriff für PS-32L / PS-32LL


UV-32W/U-32XW/CT-32W/CT-32XW

640308

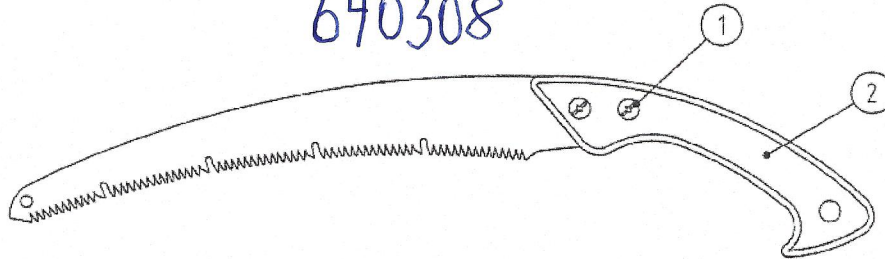

- 1) 1200-126 Schraube & Mutter für UV-32W / UV-32XW / CT-32W / CT-32XW **640339**
- 2) 1200-277 Holzhandgriff für UV-32W / UV-32XW / CT-32W / CT-32XW

 UV-32/UV-32X/CT-32/CT-32X

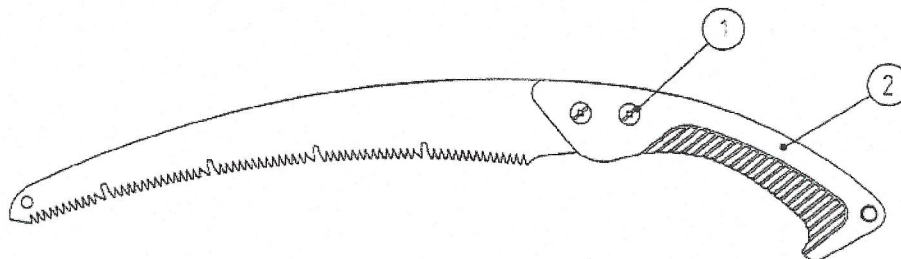

- 1) 1200-01 Schraube & Mutter für UV-32 / UV-32X / CT-32 / CT-32X
- 2) 1200-276 Handgriff für UV-32 / UV-32X / CT-32 / CT-32X